

# QuietGlue® Pro

## QuietGlue Pro Application Instructions

QuietGlue Pro is the highest performing, lowest cost soundproofing glue on the market. QuietGlue Pro sound proofing compound is fast & easy to use, designed to be very cost effective for do-it-yourself projects. Independent lab tests prove that just one layer of QuietGlue Pro between two layers of drywall dissipates more noise than other leading brands.



### Prepare Assembly

Apply QuietSeal around any electrical boxes, exposed seams (if any), or other penetrations on the existing assembly.

Cut panels for the second layer to fit around electrical boxes or other openings (as necessary). For best results use QuietPutty around all electrical boxes. Make sure the drywall surfaces are clean and free of loose fibers like sawdust.

### Cutting an opening on the QuietGlue Pro tube



1 Cut top of tube and attach nozzle to the opening.



2 Cut the tip of the nozzle creating an opening of 1/4 - 3/8 inch.



A bulk caulking gun is recommended for use with 1 and 5 gallon buckets. Never use a trowel as it will reduce performance


### Applying QuietGlue Pro



3 Leave a 1"-2" edge around the drywall panel for easier handling



4 Apply QuietGlue Pro evenly on the panel with a thickness of 3/8".

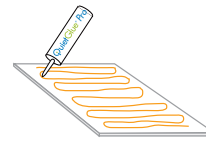

QuietGlue should evenly cover 10% - 20% of the entire surface area of panel. (Tubes: Two 28 oz. tubes per 4'X8' sheet; 1 Gallon: 73 sqft/gallon).

### Installing the Panel



5 Before placing the second layer, apply QuietSeal around the perimeter of the existing wall.

Place second layer of panel on top of existing layer, sandwiching the QuietGlue Pro in between. Insert screws along the edge about every 12 inches, as well as through the studs. Screws used should penetrate at least 1" into a wooden stud, or 5/8" into steel studs. (If possible, stagger the seam for best acoustic performance.)

Finish assembly as desired. Wait 24-48 hours before painting, sealing, or applying any other liquid components

### Use normal care and precaution when working with Serious Energy products

- QuietGlue Pro begins to dry within 5 minutes after application to any surface. However, it requires a full 15 days to completely dry, after which the full sound damping capability of your new wall or ceiling will be achieved.
- Cure time is 24-48 hours. Working time is 15 minutes.
- Cleanup with soap and water.
- Follow all OSHA guidelines when completing any construction project.
- QuietGlue Pro contains no hazardous materials. Dispose of excess QuietGlue Pro in the same responsible manner as you would any building material.

